




800-771-5921

iron center plate: replace if they are worn more than 1/32" per side, warped or cracked

maintain gap per specification; shims can be removed for adjustment.
*
**save the shims to reinstall during a rebuild!

check splines on hub and iron centerplates for stepping or wear!

airtube: replace if worn, cracked or over 10 years old.
pressure plate: replace if warped or cracked

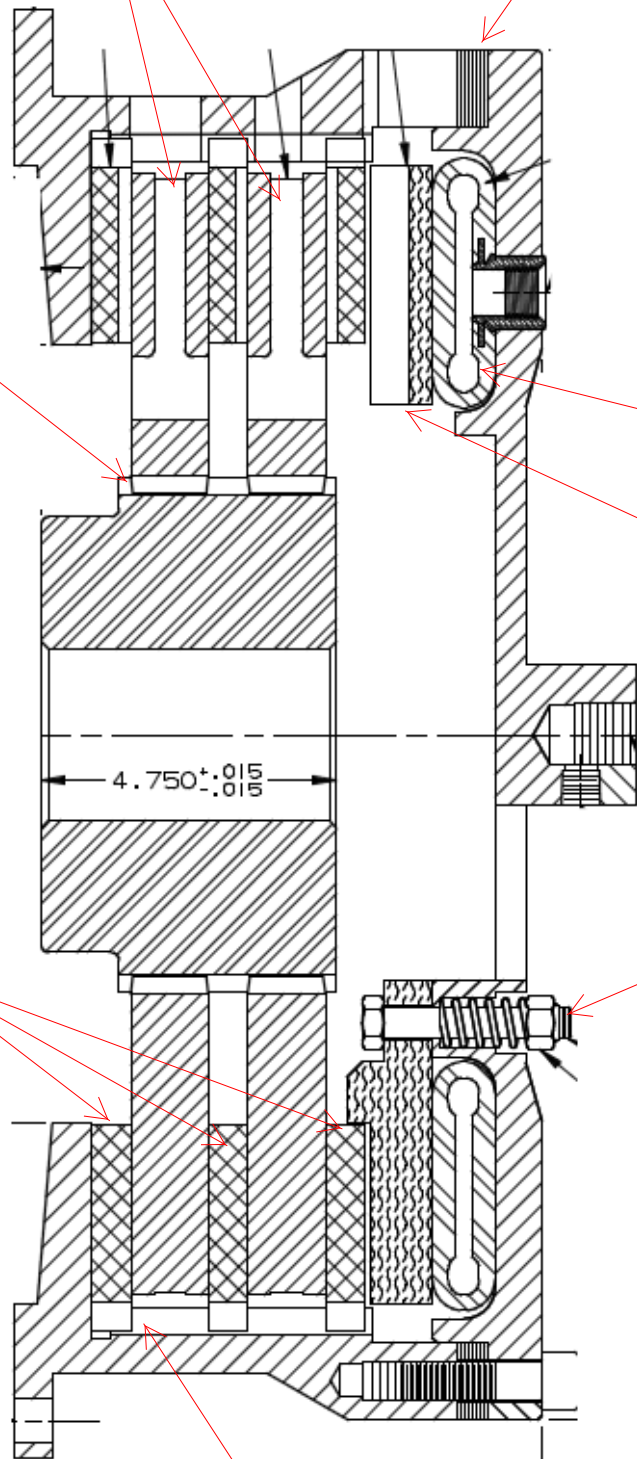

friction: replace if worn or cracked, **generally always replaced

replace springs and nuts during every rebuild.

check splines on ring for wear or stepping.